

Sound System , (8RX),(9VD),(EP0)

From September 2014



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




Information Electronics Control Module 1


- J285 Instrument Cluster Control Module
- J533 Data Bus on Board Diagnostic Interface
- J794 Information Electronics Control Module 1
- ST4 Fuse Panel 4
- SF7 Fuse 7 (On Fuse Panel F)
- T2aq 2-Pin Connector
- T2aw 2-Pin Connector
- T2bm 2-Pin Connector
- T8f 8-Pin Connector
- T12d 12-Pin Connector
- T32b 32-Pin Connector, Black
- T46b 46-Pin Connector
- TV81 Instrument Cluster CAN Bus High Wire Junction 2
- TV84 Instrument Cluster CAN Bus Low Wire Junction 2

- 372 Ground Connection 7 (in Main Wiring Harness)
- 687 Ground Connection 1 on Center Tunnel
- B444 OBD Connection 1 (in Main Wiring Harness)
- B607 Connection 3 (in Interior Wiring Harness)
- B708 Instrument Cluster CAN Bus High Connection 1 (in Main Wiring Harness)
- B709 Instrument Cluster CAN Bus Low Connection 1 (in Main Wiring Harness)

* Refer to Applicable Wiring Diagram for Fuse Positions
 *2 Refer to Applicable Wiring Diagram for Data Bus Networking
 *3 Fiber Optic Cable
 *4 Data Bus Wire (CAN Bus)

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

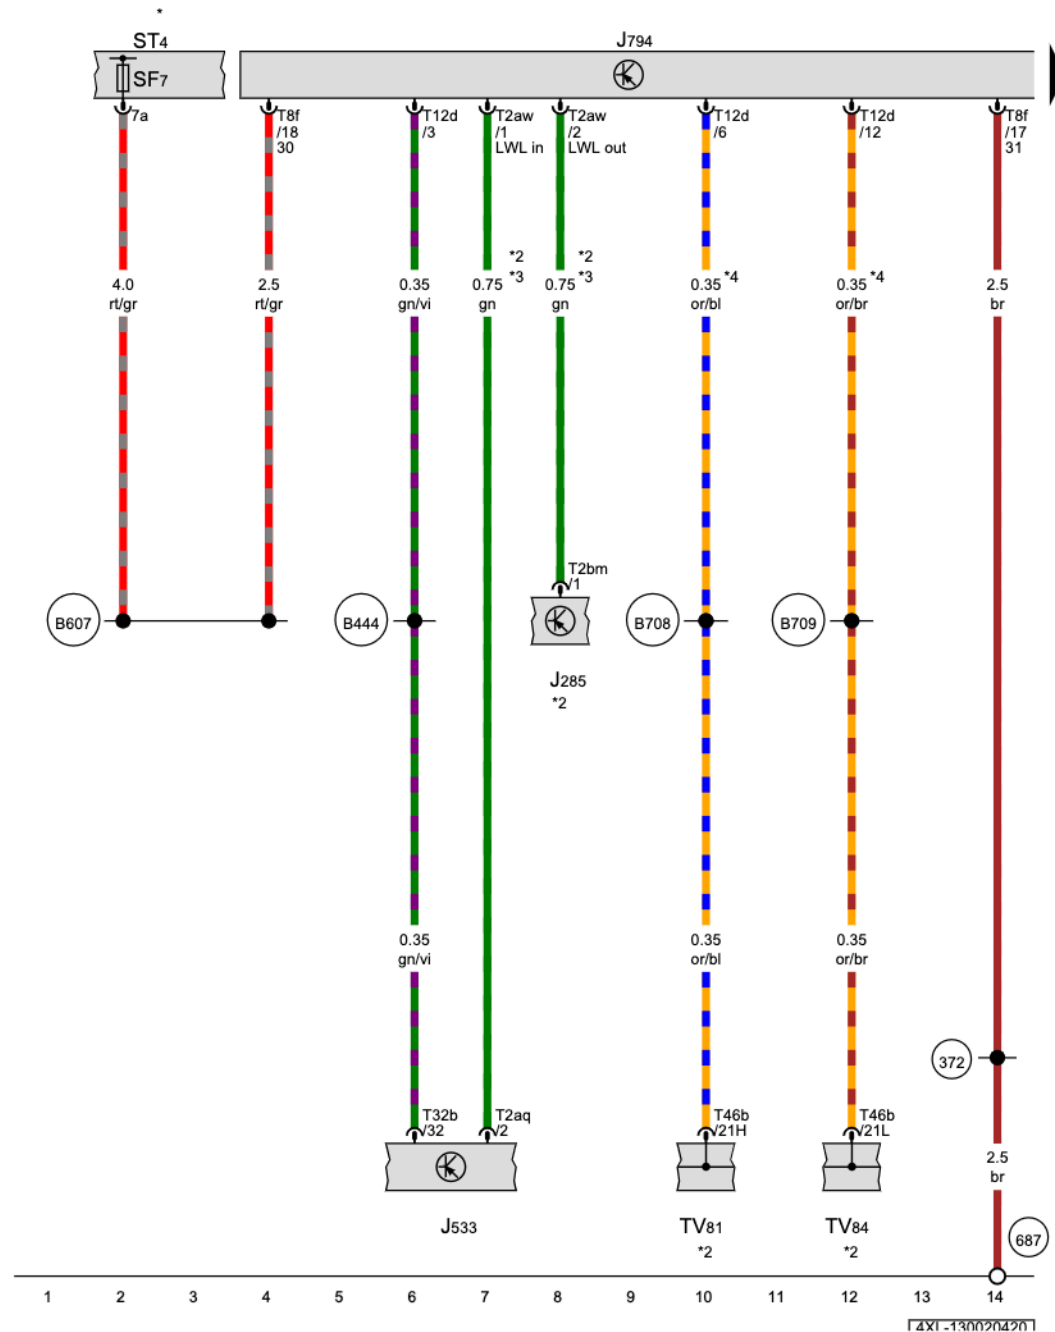

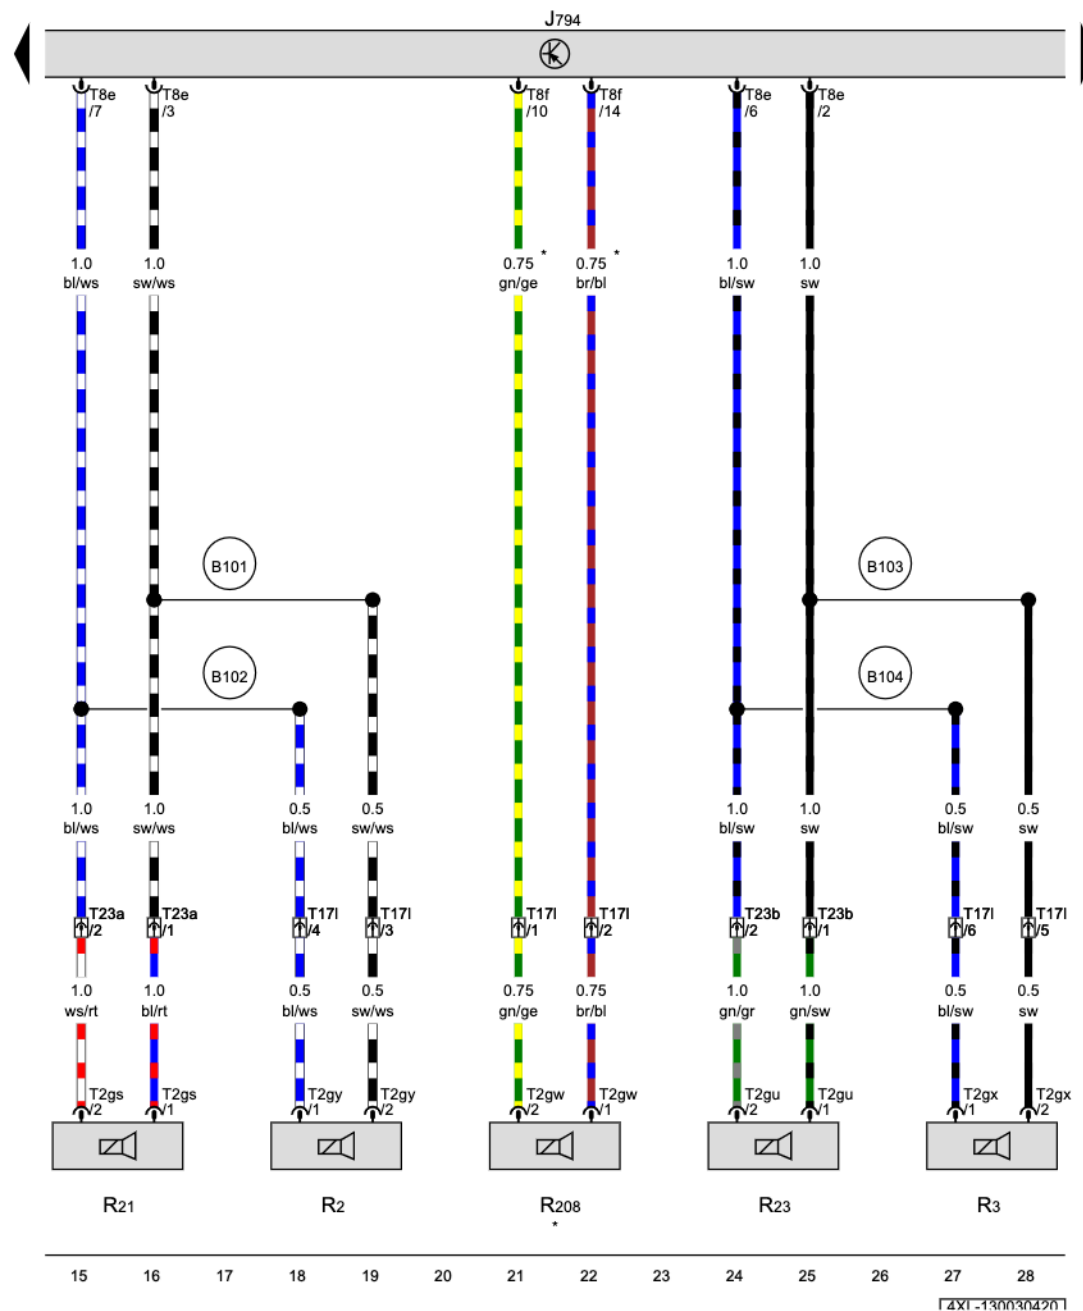

Information Electronics Control Module 1, Left Front Speaker, Right Front Speaker, Left Front Bass Speaker, Right Front Bass Speaker, Center Speaker

- J794 Information Electronics Control Module 1
- R2 Left Front Speaker
- R3 Right Front Speaker
- R21 Left Front Bass Speaker
- R23 Right Front Bass Speaker
- R208 Center Speaker
- T2gs 2-Pin Connector
- T2gu 2-Pin Connector
- T2gw 2-Pin Connector
- T2gx 2-Pin Connector
- T2gy 2-Pin Connector
- T8e 8-Pin Connector
- T8f 8-Pin Connector
- T171 17-Pin Connector, In the Left A-Pillar Connector Station, Gray
- T23a 23-Pin Connector, On the Left A-Pillar, Black
- T23b 23-Pin Connector, On the Right A-Pillar, Black

B101 Left Front Speaker Positive Connection (in Main Wiring Harness)

B102 Left Front Speaker Negative Connection (in Main Wiring Harness)


B103 Right Front Speaker Positive Connection (in Main Wiring Harness)

B104 Right Front Speaker Negative Connection (in Main Wiring Harness)

* For Vehicles with Standard Sound System

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted. This document is authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Information Electronics Control Module 1, Left Rear Treble Speaker, Left Rear Bass Speaker, Right Rear Treble Speaker, Right Rear Bass Speaker, Subwoofer

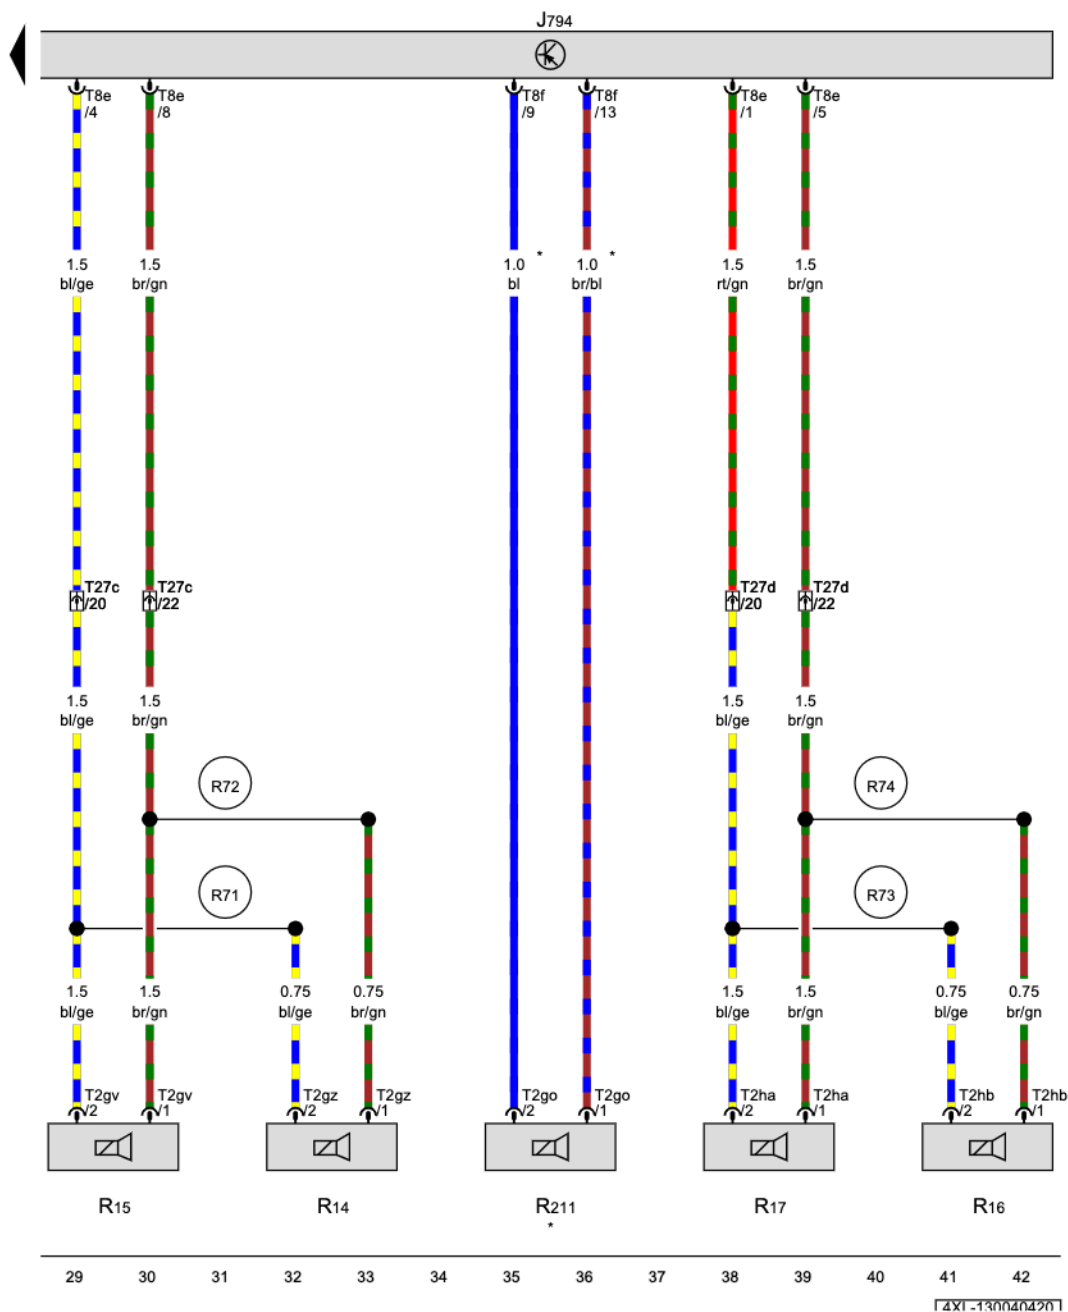

J794 Information Electronics Control Module 1

R14 Left Rear Treble Speaker

R15 Left Rear Bass Speaker

R16 Right Rear Treble Speaker

R17 Right Rear Bass Speaker

R211 Subwoofer

T2go 2-Pin Connector

T2gv 2-Pin Connector

T2gz 2-Pin Connector

T2ha 2-Pin Connector

T2hb 2-Pin Connector

T8e 8-Pin Connector

T8f 8-Pin Connector

T27c 27-Pin Connector, On the Left B-Pillar, Black

T27d 27-Pin Connector, On the Right B-Pillar, Black

R71 Speaker Positive Connection (in Left Rear Door Wiring Harness)

R72 Speaker Negative Connection (in Left Rear Door Wiring Harness)

R73 Speaker Positive Connection (in Right Rear Door Wiring Harness)

R74 Speaker Negative Connection (in Right Rear Door Wiring Harness)

* For Vehicles with Standard Sound System

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.